

**Laser Transfer Paper for Light Colored Fabrics for use with Copiers and Printers that do NOT use Fuser Oil and Copiers that DO use fuser oil – Hot Peel Only**

**Designed to produce a soft hand on the garment with no polymer outline around the printed image-even on light pastels.**

**FOR BEST RESULTS**

- White or light pastel colored Cotton, Cotton/Polyester Blend fabric. Use fabric with tight weave.
- Keep paper in original packaging until ready to use.
- After opening, store unused transfer papers in a zip-lock poly bag - in a flat, cool, dry place.

**STEP ONE – PRINTING YOUR IMAGE**

- 1) Bring paper to room temperature before printing.
- 2) Be sure to mirror or flip image prior to printing. Always pay close attention to printing.
- 3) Load paper so it will print on the unlined side of paper. In most copiers and printers, transfer paper can be fed from the cassette (automatic) tray as well as the by-pass (manual) tray. If using the cassette tray, remove other paper from the drawer before placing the transfer paper in the copier. Fan the paper well before placing it in the cassette, this helps to minimize the static.
- 4) Printer settings: Settings will vary somewhat depending on the brand of copier or printer that is used. We recommend using the PLAIN PAPER setting. If the toner has not fused well then choose the next paper setting up one increment at a time. Each setting away from PLAIN PAPER slows the paper down as it goes across the fuser, choosing a setting at the other end of the spectrum could cause the paper to jam or melt if it is too hot for the paper. Find the right setting for your machine to insure great results.

**\*\*Recommended print settings for these brands ONLY:**

HP – Print Mode: Extra Heavy

OKI – Print Mode: Ultra Heavy 1

KONICA MINOLTA BIZ HUB - THICK 3

**STEP TWO – TRANSFERRING YOUR IMAGE**

**HEAT PRESS**

- 1) Preheat press to 365° F.
- 2) Press garment for 3-5 seconds to release moisture and remove wrinkles.
- 3) Place printed image face down on the garment (the lined side will be facing up).
- 4) Set at high pressure (60 psi) for best results.
- 5) Press for 10 seconds.
- 6) **Wait 3-5 seconds**, then remove backing paper while still HOT using a smooth, even diagonal motion.

**WASHING INSTRUCTIONS**

- Turn the garment inside out.
- Wash in COLD water.
- Use a mild detergent for best results.
- Do not use bleach or bleach alternative detergents.
- Dry on LOW temperature.



**NOTICE: The information contained in this correspondence is confidential and is for the use of the intended recipient. If you are not the intended recipient, any disclosure, copy, distribution or other use of this information is STRICTLY PROHIBITED. If you have received this communication in error, please immediately contact the sender and destroy the material in its entirety, whether in electronic or hard copy format. Thank you.**